


THE MARK OF AN INTELLIGENT MEETING

To Load Pre-programmed SoftKeys:

1. Click on InterWrite icon  on Windows Task Bar and select **Devices...**
2. If MeetingPad is not connected, select it in list and connect it by clicking on **Connect** button.
3. With Pad still selected, click on **Properties** button.
4. Click on **SoftKeys** tab, click on **Import** button, and select *softkeys1.iwp*.

To program SoftKeys, refer to InterWrite Help.